

Code System Quick Reference

Setting Package Prices

To set the price of a wash package:

Press **1** at the Manager Main Menu

1PR 2SET 3TM 4RP

1=PR ..Price setting

At the Pricing Menu press **1**

1=OPT 2=DSC 3=TX

1=OPT ..Set pricing for the selected options

Enter the number corresponding to the wash package that needs to have its price changed.

Select Option

The present price of the selected package will be displayed

Basic \$ 5.00

Change the price, by pressing one of the number keys, the old price will be erased. Enter the new price.

Basic

If the price of the wash is \$8.49, press '8', '4', then '9' and 'Enter'.

Setting the Time

To set the time :

Press **1** at the Manager Main Menu

1PR 2SET 3TM 4RP

3=TM ..Set up of date and time

At the Time Menu, press **2**

1=Display 2=Time

2=Time

Enter time in a 24 hour format

Enter Time

If you would like to enter 6:45 pm in a 24 hour format, you would need to enter 18:40, press '1', than '8', followed by '4' and finally by '0'.

Printing Reports

To print period reports and fleet reports:

Period Reports

Press **4** at the Manager Main Menu.

1PR 2SET 3TM 4RP

4=RP ..Print sales reports

To print Period Reports, press

1=Period 2=Fleet

1=Period

Enter the start date of the report starting with the month, then the day

FR MMDD

Enter the end date of the report starting with the month, then the day

TO MMDD

The Code System will start processing the sales information and will than print the report.

After the printing, the Code System will ask if a copy of the Period Report is required. To print a second copy of the report, press 1, if no copy is required, press 0.

Report copy?

Entering Text

To enter text on the with the Code System keypad, hold down a numerical key down for an extended time. Three tables of characters are available :

Table 1 = Upper Case letters

Table 2 = Lower Case letters

Table 3 = Numeric values.

For example, to enter "Thank You", the first character to be entered is a "T". The

"T" resides on the '8' key. By pressing the '8' key the display shows: T.....

Next letter is lower case 'h'. Keep the 4 button pressed. It will show a capital "G", then "A", "H", "I", "g", "h". At this point release the button. The display shows: Th.....

Next letter is lower case 'a'. The table is now switched to the default small letters. So press the 2 for 'a'. Next letter is lower

case 'n' so hold down the 6. The letter 'm' will appear, then 'n', release the key, and continue with all the letters required.

The comma, brackets and period can be displayed by using the 0 button. The 'Q', the 'Z' and the hyphen can be selected with the 1 button. If a mistake is made just type 'DEL' to erase the last entered character. If all characters have been entered correctly, press 'enter'.